

Cyberbond CB

Titan 7680

Technical Datasheet

Profile:

Retainer; High strength, high viscosity

Anaerobic curing adhesive for dynamic loaded parts like in gearboxes etc.

Physical properties - monomer				
Base compound	Dimethacrylate			
Appearance	Green			
Gap filling capacity	0,06 - 0,20 mm			
Fluorescent	Yes			
Density at 20 °C	1,1 g/cm³			
Shelf life at 20 °C in	12 months			
unopend bottles				
Maximum thread	R 1 1/2 ''			

Viscosity

Cone / Plate, measured

at 20 °C

@ 160 s-1 1.200 - 1.700 mPas

Physica	properties	- Polymer
----------------	------------	-----------

Full cure time [hours] 24
Appearance Green


Temperature range -50 - 180 °C

Setting time at 23 °C

M10 brass bolt/nut 10 - 30 seconds

Adhesive strength

Substrate		Nm	
Steel	22	to	32
Stainless steel V2A	18	to	28
Galvanized steel	18	to	28
Prace	22	+0	20

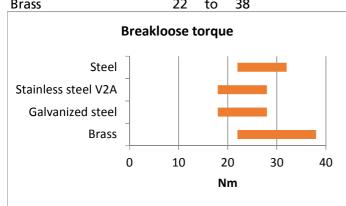

Breakloose torque on M10 bolts and nuts in Nm according to DIN 54454, free swimming without ontorque.

Solvent resistance				
Solvent	Example	Resistance		
alcohols	ethanol, methanol,	+		
	isopropyl alcohol			
	athla.aatata			
esters	ethylacetate,	+		
	benzoic benzyl			
a Ala a u Ilian di ala	ester			
other liquids	water, freon, diesel	+		
a Ala a u Ilian di ala	oil			
other liquids	ammonium	-		
	hydroxide,			
	bromine, chlorine,			
	hydrobromic acid,			
	lithium hydroxid,			
	perchloric acid,			
	potassium			
	hydroxide			
gases	acetylene, argon,	+		
	butane, ethane,			
	nitrogen			
gases	ammonia, freon	-		
	gas, oxygen (pure			
	and /or oxygen rich			
	systems)			

Shear strength

Steel pin/collar

specimen, after 24 h 26 - 46 N/mm²

Safety Information for Anaerobic Adhesives

Please consult the MSDS (Material Safety Data Sheet) before using. Keep the workplace clean and use in well ventilated areas only. Install suitable exhaust system at the workplace. Wear suitable safety glasses and gloves.

IATF 16949, ISO 13485, ISO 9001 & ISO 14001 Cyberbond CB

General Information about Anaerobic Adhesives

Anaerobic adhesives and sealants cure by means of metal contact and/or due to the absence of air. Due to these facts they are only suitable for bonding and sealing metals. Therefore, as such they are not traditional adhesives as commonly known, but are specifically good for the bonding of metal cylindrical parts where torsion-load and shearing-load play an important part. Furthermore, anaerobics are excellent sealants for threads and flanges. Anaerobis are solvent free, one component adhesives.

There are active metals (construction steel, tool steel, free cutting steel, brass, copper) and inactive metals (high alloyed or stainless steel, aluminium, electroplated surfaces, cast iron). While products used on active metals cure very fast, the same products need longer times to cure when used on inactive metals. But this does not influence the intended strength.

Measurement of Viscosity

Viscosity describes the flow-ability of a liquid. Cyberbond measures the viscosity of the products by means of the cone/plate method: the liquid is applied on a panel and a defined cone presses the liquid together and rotates.

You differentiate between a Newtonian and a thixotropic liquid. In terms of a Newtonian liquid you will get a relative constant viscosity graph in dependence of the rotary speed of the cone. In terms of thixotropic liquids the product becomes more liquid (down to its base viscosity) the faster the cone rotates.

The viscosity is measured in mPa*s.

Clean Surface

The surface condition of the mating parts has an enormous influence on the success of a bond. To achieve good bonding success the mating parts should be clean. A certain amount of e.g. oil can be tolerated.

Additional Programme

In order to support certain applications Cyberbond offers perfectly balanced additional products such as:

- Activator: in order to accelerate the curing of adhesives (Standard: CB 9191)
- Cleaner: in order to clean surfaces professionally (Standard: CB 9999)

LINOP Equipment

Cyberbond offers by means of the LINOP Equipment range suitable dosing and LED based curing devices. We also refer to suitable dosing tips which help an economical use of the adhesives (also if used manually).

Storage

Store products in a cold and dark place. Optimal storage temperature range is between 8 °C - 21 °C.

The data mentioned in this TDS, particularly the recommendations and use of products are based on our recent knowledge and experience. Due to the fact of having so many different materials involved and conditions of applications which are out of our influence, we strongely recommend to do sufficient tests in order to guarantee that Cyberbond products are suitable for the intended process and applications. Exept for wilful acts any liability based on such recommendations or any verbal advice is hereby expressly exluded.

For safe handling information on this product, consult the Material Safety Data Sheet (MSDS).

Cyberbond Europe GmbH A H.B. Fuller Company Werner-von-Siemens-Straße 2 31515 Wunstorf Germany

Tel.: +49 / 50 31 / 95 66 - 0 www.cyberbond.de



Cyberbond CB

IATF 16949, ISO 13485, ISO 9001 & ISO 14001 Cyberbond CB