

Glydant® Plus PC

Broad Spectrum Activity for Maximum Preservation



NCI: DMDM Hydantoin (and) Methylchloroisothiazolinone
(and) Methylisothiazolinone

Key Product Benefits

- Stable, synergistic, patented blend
- Low isothiazolinone levels in end products (< 1 ppm)
- Ultra-low free formaldehyde (< 0.09%)
- Safe toxicology profile
- Broad spectrum efficacy
- Effective against formaldehyde and isothiazolinone resistant organisms
- Neutral pH
- Color stability
- Ease of handling
- Compatible and soluble in virtually all raw materials
- Aqueous, non-freezing blend

Recommended Use Level

0.05–0.2%

Description

Glydant® Plus PC is a unique blend of two chemistries which combined offer synergistic properties. The blend offers broad spectrum activity with the combination of DMDM Hydantoin and MCI/MI chemistries. This unique blend of materials is both a highly stable as well as patented formulation.

Compositional Breakdown

Chemical Compound Breakdown	CAS No.	EINECS No.
DMDM Hydantoin	6440-58-0	229-222-8
Methylchloroisothiazolinone	26172-55-4	247-500-7
Methylisothiazolinone	2682-20-4	220-239-6
Water	7732-18-5	231-791-2

Chemical Compound Breakdown	%
DMDM Hydantoin	71%
Methyl chloroisothiazolinone	0.04%
Methylisothiazolinone	0.01%
QS water	28.95%

Applications

- Anhydrous
- Body wash
- Conditioner
- Cream
- Deo/Anti-Perspirant
- Eye creams/gels
- Eye shadow
- Face lotion
- Face wipes
- Facial cream
- Foundation
- Hair gel
- Hand soap (non anti-bac)
- Lotion
- Makeup remover
- Mascara
- Oil in Water
- Powder
- Shampoo
- Sun Care
- Toner
- Water in Oil

Efficacy


Studies were run using different concentrations of Glydant® Plus PC in various formulations to see efficacy against various bacteria, yeast and fungi. All samples were inoculated at the beginning of the study, sampled at 7, 14, 21 and 28 days.

Anionic Protein Shampoo


pH: 7

Ingredient	%W/W
Sterile DI Water	36.0%
Sodium Lauryl Ether Sulfate	35.0%
Triethanolamine Lauryl Sulfate	25.0%
Coco Diethanolamine	3.0%
Anhydrous Protein	1.0%
Total	100.00%

Percent of Glydant® Plus PC required to achieve < 10 cfu/g of mixed bacteria in anionic shampoo

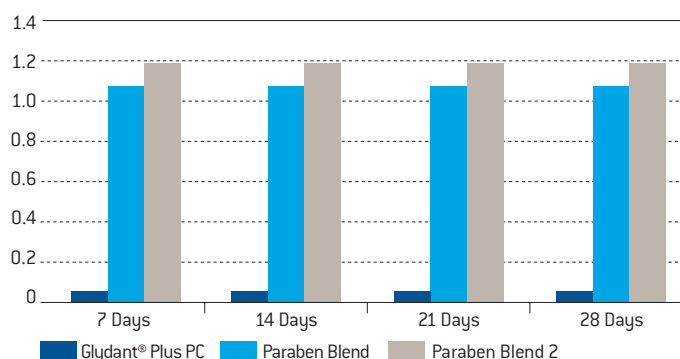

Percent of Glydant® Plus PC required to achieve < 10 cfu/g of mixed fungi in anionic shampoo

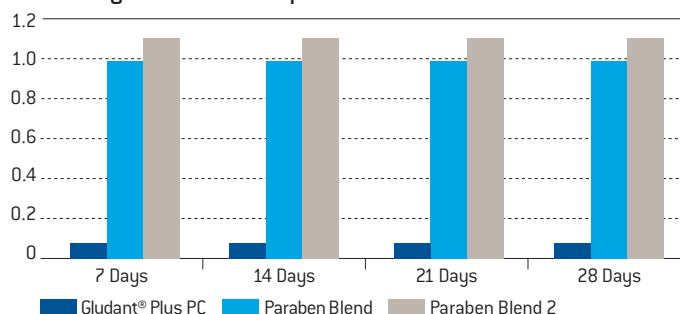


Non-Ionic Cream


pH: 6

Ingredient	%W/W
Aldospense®	4.0%
Aldo® MSC	6.0%
Cetearyl Alcohol	1.5%
Lonzest® 143-S	8.0%
Glycon G	5.0%
Water	Q.S.
Total	100.00%

Percent of Glydant® Plus PC required to achieve < 10 cfu/g of mixed bacteria in a nonionic cream

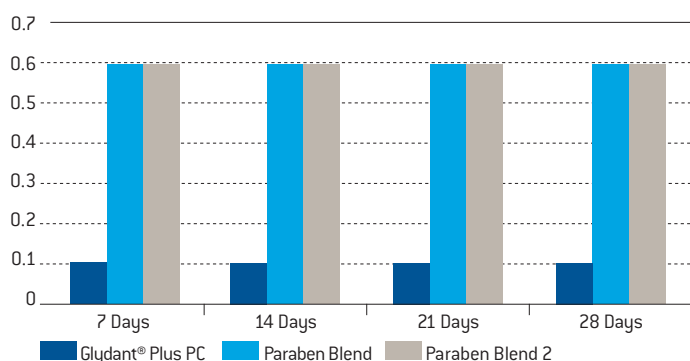

Percent of Glydant® Plus PC required to achieve < 10 cfu/g of mixed fungi in a nonionic cream

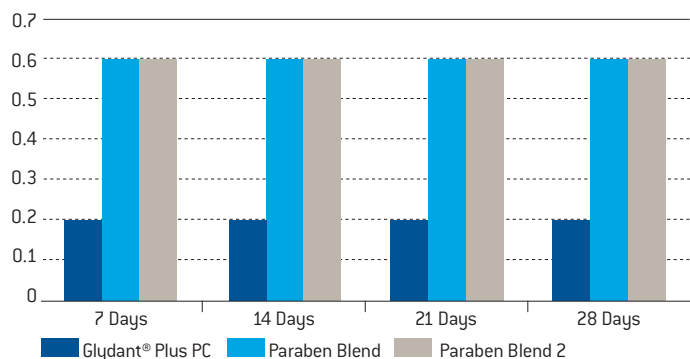

Global Regulatory

Europe

- Not permitted for leave-on products. Maximum use level of 0.0015 % CMI/MI for rinse-off applications

Japan

- Max use level of 0.3 % DMDMH and 0.01 % CMI/MI for rinse-off
- Not permitted for leave-on due to CMI/MI

US

- Max use level of 0.6 % DMDMH and 0.00075 % CMI/MI for leave-on
- Max use level of 0.6 % DMDMH and 0.0015 % CMI/MI for rinse-off

General

- Not allowed for oral hygiene and lip products or in preparations for children under the age of 3

Formulation Recommendations

- Readily soluble in aqueous phase, as well as in polar organic solvents
- Reducing agents, amines and strong nucleophiles will reduce activity of MCI/MI
- When used with amines, pH should be below 6 before addition
- Surfactants should be checked for residual bisulfite before addition
- Should be added during the cool down phase of processing, at temperature of 50°C or below
- pH: 3–9

Typical Properties

Appearance	Liquid
Color	Colorless to pale yellow
Odor	Odorless

Lonza Solutions AG

Muenchensteinerstrasse 38
4002 Basel, Switzerland
Tel +41 61 316 81 11

412 Mt Kemble Ave Suite 200S
Morristown, NJ 07960, USA
Tel +1 800 777 1875

Important notice: On 1 July 2021, the companies and assets comprising the Lonza Specialty Ingredients Business (LSI) were acquired by Herens HoldCoLtd. (Buyer), an entity controlled by Bain Capital Private Equity and Cinven, and LSI is no longer part of the Lonza Group Ltd. Neither Lonza Group Ltd nor any other member of the Lonza Group shall have any responsibility for this document, the use of any Lonza labels, or any other act or omission by LSI or the Buyer.

Review and follow all product safety instructions. All product information corresponds to LSI's knowledge on the subject at the date of publication, but LSI makes no warranty as to its accuracy or completeness and LSI assumes no obligation to update it. Product information is intended for use by recipients experienced and knowledgeable in the field, who are capable of and responsible for independently determining the suitability of ingredients for intended uses and to ensure their compliance with applicable law. Proper use of this information is the sole responsibility of the recipient. This information relates solely to the product as an ingredient. It may not be applicable, complete or suitable for the recipient's finished product or application; therefore republication of such information or related statements is prohibited. Information provided by LSI is not intended and should not be construed as a license to operate under or a recommendation to infringe any patent or other intellectual property right. No claims are made herein for any specific intermediate or end-use application. All trademarks belong to LSI or its affiliates or to their respective third parties and are used here only for informational purposes. © 2021

lsi.lonza.com/

Contact: preservation@lonza.com